

Konic

# INSTALLATION INSTRUCTIONS


**KN-AP16** V1

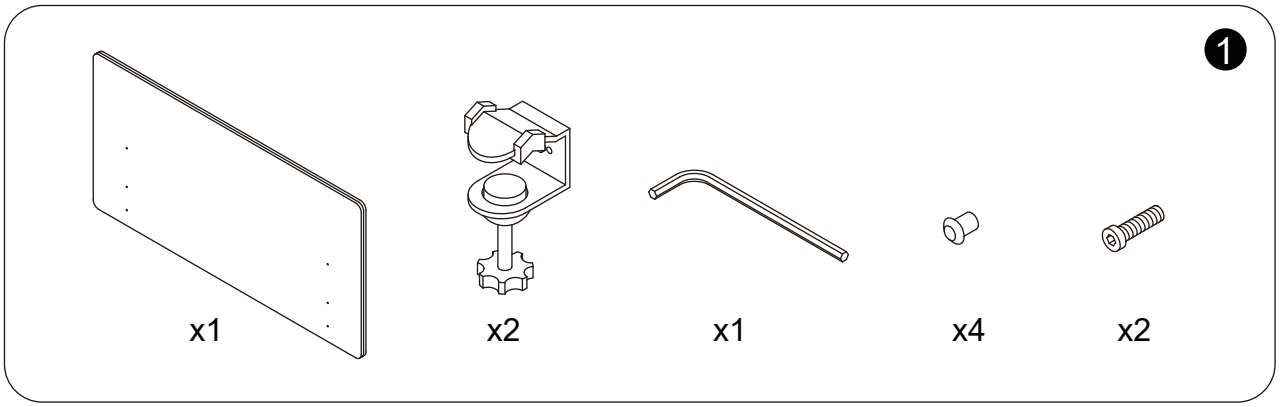



All accessories needed.

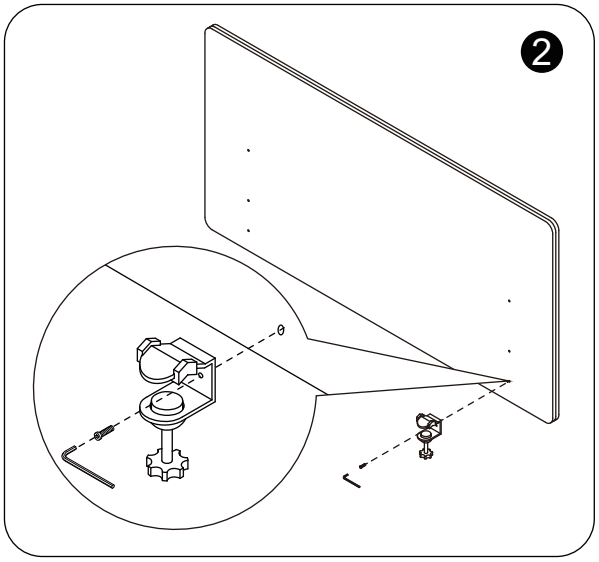


Insert screw through the clamp and into the panel.

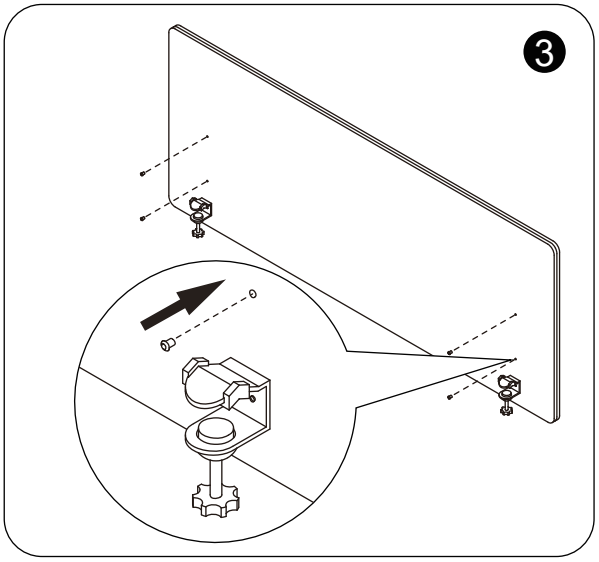


Insert hole plugs into the remaining holes until firm.

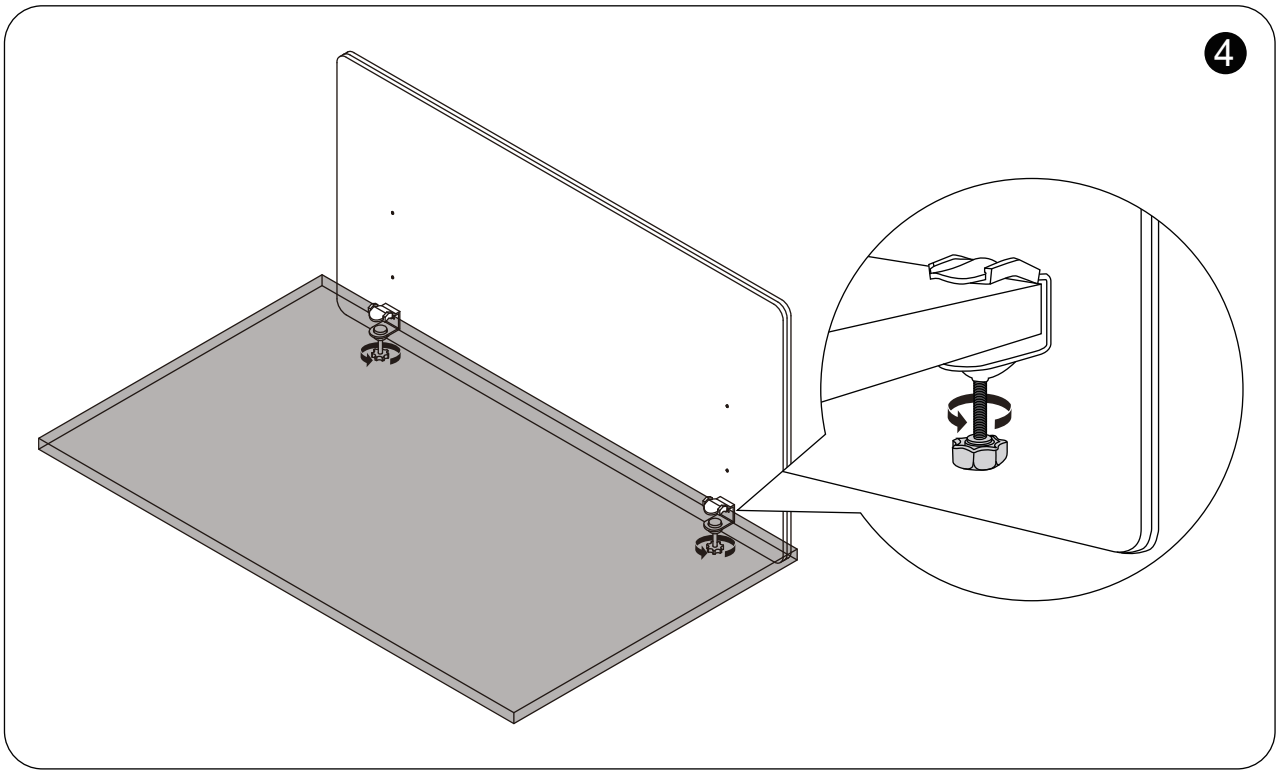


Rotate the screw to secure the panel to the edge of the desk.